



www.motorcontrolwarehouse.co.uk

Document number	MCW-E2-013
Revision	0.0
Author	Gareth Lloyd
Product	Optidrive E2 IP20 & IP66 non-switched. Optidrive IP66 switched can be configured if the on-board switch connections are removed.

Title	E2 Parameter P-15 = 11 Set-up Guide
--------------	-------------------------------------

Summary	This document gives set-up information on the Optidrive E2 parameter P-15 = 11
----------------	--

NOTE: Please read in conjunction with the Optidrive E2 User Guide.

This set-up guide gives information on the easiest way to set up the E2 for basic motor control. This set up is from default settings - as the drive comes out of the box from the factory.

This set-up guide also assumes a standard 50Hz AC induction motor is being used.

This set up uses 1 normally open momentary push button switch and one normally closed momentary push button switch to enable/run and stop the drive. It uses another normally open momentary push button switch to change direction of rotation. A potentiometer is used for speed control.

Parameter settings

In most cases, the default maximum and minimum frequencies and motor rated voltage do not need adjusting because the default settings are OK for the majority of applications and motors.



The acceleration and deceleration times may need some adjustment depending on the application and load type.

The motor rated current (P-08) must be set to the motor nameplate current to provide motor protection in case of motor overload.


In the majority of applications, the motor rated speed (P-10) does not need setting.

Parameter	Description	Default setting	Description
P-01	Maximum frequency	50Hz	Maximum frequency/speed the motor will run at: 2 pole motor: 3000rpm 4 pole motor: 1500rpm 6 pole motor: 1000rpm 8 pole motor 750rpm
P-02	Minimum frequency	0Hz	Minimum frequency/speed the motor will run at (0 rpm)
P-03	Acceleration time	5 seconds	Acceleration time from 0Hz to 50Hz
P-04	Deceleration time	5 seconds	Deceleration time from 50Hz to 0Hz
P-07	Motor rated voltage	230V/400V	Set to the motor nameplate voltage
P-08	Motor rated current	Drive dependant	Set to the motor nameplate current
P-14	Extended parameter access	0	Set to 101 to allow extended parameter access
P-15	Digital input function select	0	Set to 11

NOTE: Please check that the motor terminal box connections are correct for the voltage you are applying to the motor:

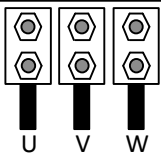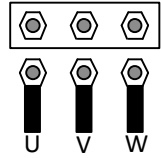Incoming Supply Voltage	Motor Nameplate Voltages	Connections	
230V	230V / 400V	Delta Δ	
400V	400V / 690V		
400V	230V / 400V	Star \star	

Basic control terminal connections

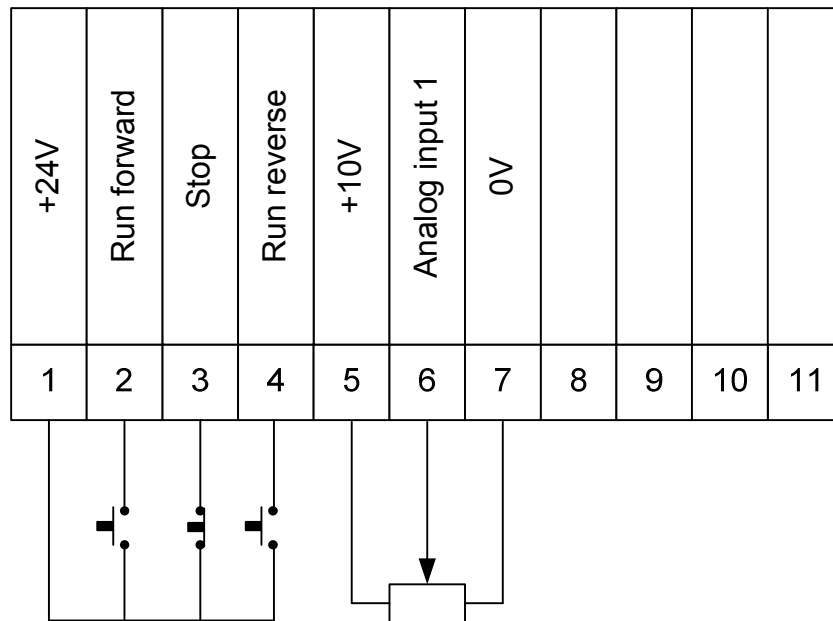

Terminal 1

+24VDC User supply

Terminal 2: Run Forward

Normally open (NO) push button switch
Momentary close to run forward

Terminal 3: Stop

Normally closed (NC) push button switch
Momentary open to stop

Terminal 4: Run Reverse

Normally open (NO) push button switch
Momentary close to run reverse

Terminal 5: +10V

Speed potentiometer +10V reference


Terminal 6: Analog input

Speed potentiometer wiper: 0 to +10V

Terminal 7: 0V

Speed potentiometer 0V reference

Full control terminal connections

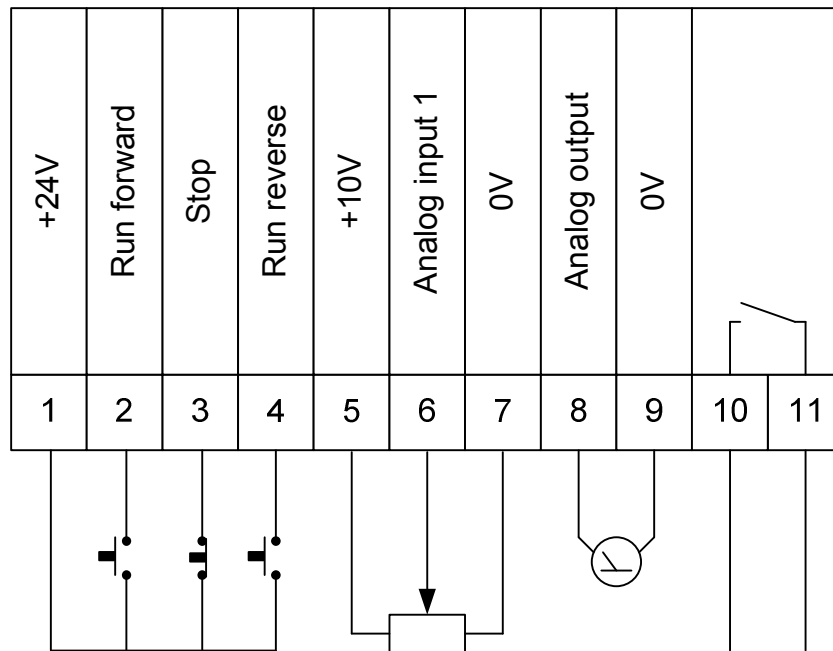

Terminal 1

+24VDC User supply

Terminal 2: Run Forward

Normally open (NO) push button switch

Momentary close to run forward

Terminal 3: Stop

Normally closed (NC) push button switch

Momentary open to stop

Terminal 4: Run Reverse

Normally open (NO) push button switch

Momentary close to run reverse

Terminal 5: +10V

Speed potentiometer +10V reference

Terminal 6: Analog input

Speed potentiometer wiper: 0 to +10V

Terminal 7: 0V

Speed potentiometer 0V reference

Terminal 8: Analog output - speed

0 to +10VDC output proportional to motor speed (0 to 50Hz = 0 to +10V)

Terminals 10 & 11: Drive Healthy relay

Relay Open: Drive fault

Relay closed: Drive healthy